

---

# **LinMot®**

---

## **LinRS**

**Documentation of the LinRS Interface for the following  
Controllers:**

- E1100-RS, E1100-RS-HC
- E1100-GP, E1100-GP-HC
- E1130-DP, E1130-DP-HC



---

## **LinRS Interface V3.6**

### **User Manual**

---

NTI AG  
*LinMot®*  
Haerdlistrasse 15  
CH-8957 Spreitenbach

Tel.: +41 (0)56 419 9191  
Fax: +41 (0)56 419 9192  
Email: [office@linmot.com](mailto:office@linmot.com)  
Internet: [www.linmot.com](http://www.linmot.com)

© 2006 NTI AG

This work is protected by copyright.

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying,

recording, microfilm, storing in an information retrieval system, not even for didactical use, or translating, in whole or in part, without the prior written consent of NTI AG.

LinMot® is a registered trademark of NTI AG.

Note

The information in this documentation reflects the stage of development at the time of press and is therefore without obligation. NTI AG reserves itself the right to make changes at any time and without notice to reflect further technical advance or product improvement. Please refer to the latest edition of our "General business terms"

Document version 3.6 / June 2006

|   |           |
|---|-----------|
| <b>SYSTEM OVERVIEW</b> .....  | <b>5</b>  |
| 1.1 REFERENCES .....  | 5         |
| 1.2 DEFINITIONS, ITEMS, SHORTCUTS .....   | 5         |
| <b>2 CONNECTING THE RS BUS</b> .....  | <b>6</b>  |
| 2.1 PIN OUT OF THE COM CONNECTOR: .....   | 6         |
| 2.2 PIN OUT OF THE CMD CONNECTOR: .....   | 6         |
| <b>3 POWER UP BEHAVIOUR</b> .....   | <b>7</b>  |
| 3.1 ACTIVATING AND DEACTIVATING THE LINRS PROTOCOL .....                        | 7         |
| 3.2 ID AND BAUD RATE SELECTION .....  | 7         |
| 3.2.1 <i>Baud Rate Selection</i> .....  | 8         |
| 3.2.2 <i>ID Selection</i> .....   | 8         |
| 3.3 RS TOPOLOGIES .....   | 9         |
| 3.3.1 <i>RS232 Topology</i> .....   | 9         |
| 3.3.2 <i>RS422 Topology</i> .....   | 9         |
| 3.3.3 <i>RS485 Topology</i> .....   | 10        |
| <b>4 LINRS MESSAGE FORMAT</b> .....   | <b>11</b> |
| 4.1 ID .....  | 11        |
| 4.2 LENGTH .....  | 11        |
| 4.3 DATA .....  | 11        |
| 4.4 CHECKSUM .....  | 11        |
| <b>5 MESSAGE DATA DEFINITIONS</b> .....   | <b>12</b> |
| 5.1 MESSAGE MAIN ID .....   | 12        |
| <b>6 RESPONSE REQUEST</b> .....   | <b>14</b> |
| 6.1.1.1 Configuration of the Default Response .....                             | 14        |
| 6.1.2 <i>Request Default Response Example</i> .....                             | 15        |
| 6.1.3 <i>Default MC Response Request with Status Word Request Example</i> ..... | 16        |
| <b>7 WRITE CONTROL WORD</b> .....   | <b>17</b> |
| 7.1 WRITE CONTROL WORD EXAMPLE 1 .....  | 17        |
| 7.2 WRITE CONTROL WORD EXAMPLE 2 .....  | 18        |
| 7.3 WRITE CONTROL WORD EXAMPLE 3 .....  | 19        |
| <b>8 WRITE MOTION COMMAND INTERFACE</b> .....                                   | <b>20</b> |
| 8.1 WRITE MOTION COMMAND INTERFACE EXAMPLE 1 .....                              | 20        |
| 8.2 WRITE MOTION COMMAND INTERFACE EXAMPLE 2 .....                              | 21        |
| <b>9 PARAMETER GROUP</b> .....  | <b>22</b> |
| 9.1 PARAMETER/VARIABLE READ RAM EXAMPLE .....                                   | 23        |
| 9.2 PARAMETER WRITE RAM EXAMPLE .....   | 23        |
| <b>10 PARAMETER CONFIGURATION GROUP</b> .....                                   | <b>25</b> |
| 10.1 PARAMETER CONFIGURATION READ ROM VALUE EXAMPLE .....                       | 27        |
| 10.2 PARAMETER CONFIGURATION READ OUT CHANGED PARAMETERS .....                  | 28        |
| 10.3 PARAMETER CONFIGURATION READ OUT UPID LIST .....                           | 29        |

---

|           |  |           |
|-----------|--|-----------|
| 10.4      | PARAMETER CONFIGURATION DEFAULTING SW-INSTANCE PARAMETERS .....  | 30        |
| <b>11</b> | <b>CURVE CONFIGURATION MESSAGE GROUP.....</b>                    | <b>31</b> |
| 11.1      | READ CURVE FROM SERVO EXAMPLE .....                              | 34        |
| 11.2      | WRITE CURVE TO SERVO EXAMPLE.....                                | 36        |
| <b>12</b> | <b>COMMAND TABLE MESSAGE GROUP .....</b>                         | <b>38</b> |
| 12.1      | READ COMMAND TABLE ENTRY FROM SERVO EXAMPLE.....                 | 42        |
| 12.2      | WRITE COMMAND TABLE ENTRY TO SERVO EXAMPLE .....                 | 43        |
| <b>13</b> | <b>PROGRAM HANDLING MESSAGE GROUP.....</b>                       | <b>44</b> |
| 13.1      | RESET SERVO CONTROLLER WITH RESPONSE AFTER COMPLETION .....      | 44        |
| 13.2      | RESET SERVO CONTROLLER WITH IMMEDIATE RESPONSE.....              | 45        |
| 13.3      | STOP MC- AND APPLICATION SW.....                                 | 45        |
| 13.4      | START MC- AND APPLICATION SW WITH RESPONSE AFTER COMPLETION..... | 46        |
| 13.5      | START MC- AND APPLICATION SW WITH IMMEDIATE RESPONSE.....        | 47        |
| <b>14</b> | <b>READ ERROR INFO MESSAGE GROUP .....</b>                       | <b>48</b> |
| 14.1      | GET ERROR SHORT TEXT OF ACTUAL ERROR.....                        | 48        |
| 14.2      | GET ERROR SHORT TEXT OF DEFINED ERROR CODE.....                  | 49        |
| 14.3      | GET ERROR COUNTERS OF ERROR LOG AND TOTAL OCCURRED ERRORS .....  | 50        |
| 14.4      | GET ERROR LOG ENTRY .....  | 51        |
| <b>15</b> | <b>LINRS PARAMETERS.....</b>                                     | <b>52</b> |
| <b>16</b> | <b>ERROR .....</b>   | <b>56</b> |
| 16.1      | LINRS ERROR CODES .....  | 56        |

## System Overview

The LinMot RS controllers E1100-RS(-HC) and E1100-GP(-HC) supports the LinRS communication profile. LinRS is a LinMot specific RS protocol to run the E1100 Servo controller over RS 232, RS 422 RS 485 serial connections.

When running the E110 servo controller over a RS connection with LinRS the configuration and debugging can be done over the CAN bus connection. LinMot-Talk1100 supports an USB to CAN (Part No. 0150-3134 ) converter for this reason.

### 1.1 References

| Ref | Title  | Source   |
|-----|--|--|
| 1   | User Manual Motion Control SW  | <a href="http://www.linmot.com">www.linmot.com</a> |
| 2   | LinMot E1100 Servo Controller Configuration over Fieldbus Interfaces | <a href="http://www.linmot.com">www.linmot.com</a> |

The documentation is distributed with the LinMot-Talk1100 SW.

### 1.2 Definitions, Items, Shortcuts


| Shortcut | Meaning                      |
|----------|------------------------------|
| LM       | LinMot linear motor          |
| OS       | Operating System SW          |
| MC       | Motion Control SW            |
| UPID     | Unique Parameter ID (16 bit) |
| CT       | Command Table                |

## 2 Connecting the RS bus

### 2.1 Pin Out of the COM Connector:

Over this connector the RS 232 or the RS 422/RS485 serial lines are available. This connector is available with all E1100 series servo controllers.

DSBU 9 male:



|       |            |       |            |
|-------|------------|-------|------------|
| Pin 1 | RS-485 Tx+ | Pin 6 | RS-485 Rx- |
| Pin 2 | RS-232 TX  | Pin 7 | RS-485 Tx- |
| Pin 3 | RS-232 RX  | Pin 8 | CAN L      |
| Pin 4 | RS-485 Rx+ | Pin 9 | CAN H      |
| Pin 5 | GND (100Ω) |       |            |

### 2.2 Pin Out of the CMD Connector:

The CMD connector exists only at the E1100-RS(-HC) and E1100-DP(-HC) controllers, 2xRJ45 with 1:1 connected signals. Standard twisted pairs: 1/2, 3/6, 4/5, 7/8. Over these connectors only the bus capable RS 422/RS485 lines are available.

Ethernet cables according standard




|         |              |
|---------|--------------|
| Pin 1   | RS485 Rx+    |
| Pin 2   | RS485 Rx-    |
| Pin 3   | RS485 Tx+    |
| Pin 4/5 | Ground (1kΩ) |
| Pin 6   | RS485 Tx-    |
| Pin 7   | CAN H        |
| Pin 8   | CAN L        |

### 3 Power Up Behaviour

The power up behaviour can be defined over the S3 switches and the S1 and S2 hex switches and the parameter configuration. So the servo controller can be configured over the LinRS protocol. It is possible to completely setup the controller over LinRS when it has installed the LinRS SW.

#### 3.1 Activating and Deactivating the LinRS Protocol

Over the Interface Switch on the S3.4 switches the LinRS protocol can be activated (Switch On) or deactivated (Switch Off).

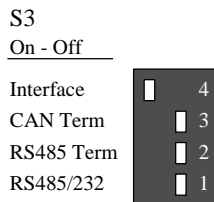

If the Interface Switch on the S3.4 is off during booting the system, the LinRS is deactivated for the rest of this power cycle. In this case the servo controller can normally be accessed with the LinMot-Talk 1100 SW over the RS or CAN line, for configuration and testing.

If the Interface Switch on the S3.4 is on during booting the system and the LinRS protocol is activated. The RS line of the servo controller is no longer available for the LinMot-Talk 1100 SW, in this case configuring debugging and testing can only be done over the CAN bus. Now switching off the interface to off reactivates the RS line for the LinMot-Talk 1100 SW, then switching on again, reinstall the LinRS protocol for the RS line, this enables some debugging capabilities without running the LinMot-Talk 1100 SW over the CAN bus. We recommend the use of the USB to CAN converter, when using the LinRS protocol for configuring and debugging.

With the RS485/RS232 switch on S3 the bus driver can be selected.

#### 3.2 ID and Baud Rate Selection

With the default parameterization the baud rate can be selected over S1 and the ID is selected over S2.

### 3.2.1 Baud Rate Selection

The baud rate can be defined over the S1 hex switch (default setting) or by parameter value.

| <b>S1 Baud Rate Code Table</b> |                           |
|--------------------------------|---------------------------|
| <b>S1 Value</b>                | <b>Selected Baud Rate</b> |
| 0                              | Undefined Baud Rate       |
| 1                              | 4800Bit/s                 |
| 2                              | 9600 Bit/s                |
| 3                              | 19200 Bit/s               |
| 4                              | 38400 Bit/s               |
| 5                              | 57600 Bit/s               |
| 6                              | 115200 Bit/s              |
| 7                              | Undefined Baud Rate       |
| .                              | Undefined Baud Rate       |

### 3.2.2 ID Selection

Like the baud rate the protocol ID can be defined over the S2 hex switch (default setting), by parameter value or by the S1&S2 hex switches.

| <b>S2 ID code table</b> |                       |
|-------------------------|-----------------------|
| <b>S2 Value</b>         | <b>Selected MACID</b> |
| 0                       | MACID = 0x00h         |
| 1                       | MACID = 0x01h         |
| 2                       | MACID = 0x02h         |
| .                       | .                     |
| F                       | MACID = 0x0Fh         |

| <b>S1&amp;S2 ID code table</b> |                 |                       |
|--------------------------------|-----------------|-----------------------|
| <b>S1 Value</b>                | <b>S2 Value</b> | <b>Selected MACID</b> |
| 0                              | 0               | MACID = 0x00h         |
| 1                              | 1               | MACID = 0x01h         |
| 2                              | 2               | MACID = 0x02h         |
| .                              | .               | .                     |
| 1                              | 0               | MACID = 0x10h         |
| .                              | .               | .                     |
| F                              | F               | MACID = 0xFFh         |




### 3.3 RS Topologies

#### 3.3.1 RS232 Topology


Over a RS232 line only one slave can be connected to the master, controlling several slaves needs several RS232 lines.

The RS232 serial lines are only on the COM connector X5 available.

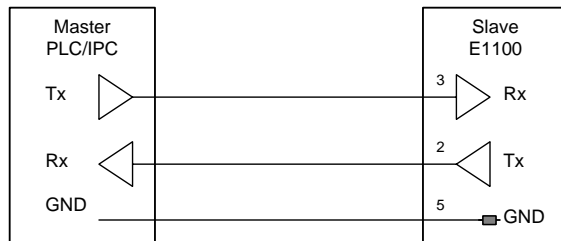


#### 3.3.2 RS422 Topology

With the RS422 topology several Slaves can be accessed. The master transmit lines are connected to all slave receives lines and all slave transmit lines are connected with master receive lines. With this topology debugging is quiet easy because master communication and slave communication is separated. The easiest way to loop through the communication lines at slave side, are over the X7/X8 RJ45 connectors with the RS/DP servo controllers. Activate RS485 Term on S3.2 on the last slave servo controller.

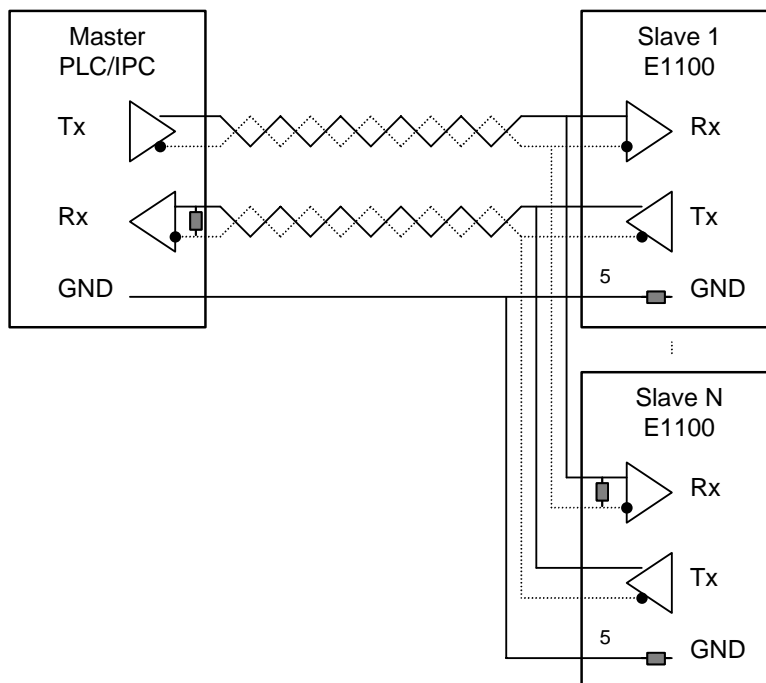

### 3.3.3 RS485 Topology

With the RS485 topology also several Slaves can be accessed. The master transmit lines are connected to all slave receives lines and all slave transmit lines are connected with master receive lines. With this topology debugging is quiet easy because master communication and slave communication is separated. The easiest way to loop through the communication lines at slave side, are over the X7/X8 RJ45 connectors with the RS/DP servo controllers, but at the first slave the RS485 AB lines from the master have to be connected with the Rx **and** the Tx signal lines. Activate RS485 Term on S3.2 on the last slave servo controller.

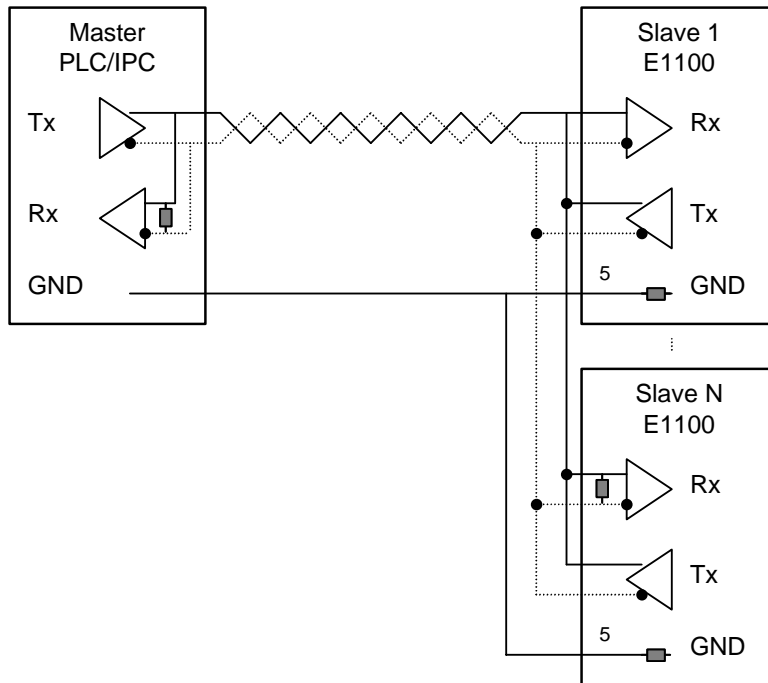

## 4 LinRS Message Format

The following tables define the principle structure of a LinRS Message.

| Header       |                      |       | Data         |                         |                          |        | Opt. Checksum |                  | End               |              |
|--------------|----------------------|-------|--------------|-------------------------|--------------------------|--------|---------------|------------------|-------------------|--------------|
| Start Header | ID                   | Len   | Start Data 0 | Data 1<br>Msg ID<br>Low | Data 2<br>Msg ID<br>High | ...    | Data n-1      | Check-Sum<br>Low | Check-Sum<br>High | End Telegram |
| <b>01h</b>   | 0..FFh               | 2..63 | <b>02h</b>   | 0..FFh                  | 0..FFh                   | 0..FFh | 0..FFh        | 0..FFh           | 0..FFh            | <b>04h</b>   |
|              |                      |       | Length Count |                         |                          |        |               |                  |                   |              |
|              | Checksum Calculation |       |              |                         |                          |        |               |                  |                   |              |

| Byte Nr | Name               | Description                 | Value  |
|---------|--------------------|-----------------------------|--------|
| 0       | Start Header       | Fix ID at telegram start    | 01h    |
| 1       | ID                 | ID of LinMot Controller     | 0..FFh |
| 2       | Length             | Length of telegram data n   | 2..63  |
| 3       | Start Data 0       | Fix ID at telegram start    | 02h    |
| 4       | Data 1 Msg ID Low  | Message Sub ID              | 0..FFh |
| 5       | Data 2 Msg ID High | Message Main ID             | 0..FFh |
| 6       | Data 3             | Message data 0              | 0..FFh |
| ..      | ..                 | ..                          | 0..FFh |
| n+2     | Data n-1           | Message data n-1            | 0..FFh |
| n+3     | Checksum Low       | Optional checksum Low Byte  | 0..FFh |
| n+4     | Checksum High      | Optional checksum High Byte | 0..FFh |
| n+5/n+3 | End Telegram       | Fix ID at telegram end      | 04h    |

Data are transmitted lowest byte first highest byte last. Dummy Data could be added to get a fix master transmission length.

### 4.1 ID

The ID is one byte that defines the address (ID) of the LinMot Servo controller. This ID is defined by two Hex Switches or by a parameter.

### 4.2 Length

The length defines the data length in bytes.

### 4.3 Data

In the data fields the command specific data are transmitted.

### 4.4 Checksum

The checksum field is optional. Two different methods are supported:

- Byte wise addition modulo  $2^{16}$  (fast and easy)
- CRC CCITT

## 5 Message Data Definitions

### 5.1 Message Main ID

The Message object are identified in a first level by following main Message ID's

| Message Main ID | Description                                   |
|-----------------|---|
| 0x00h           | Response Request / Response itself            |
| <b>0x01h</b>    | <b>Write Control Word</b>                     |
| <b>0x02h</b>    | <b>Write Motion Command Interface</b>         |
| 0x03h           | Parameter Message Group with default Response |
| 0x04h           | Curve Configuration Message Group             |
| 0x05h           | Parameter Configuration Message Group         |
| 0x06h           | Program Handling Message Group                |
| 0x07h           | Read Error Info Message Group                 |
| 0x08h           | Command Table Configuration Message Group     |

In the easiest way of using the LinRS protocol, only the Messages with the Main ID's (0), 1 and 2 are needed to control the behavior of the servo controller.

The other Main messages ID's are only needed if configuration or setup functionality over the LinRS protocol is needed and supported. In these cases a much deeper integration of the LinMot Servo controller into the superior PLC/IPC is supported and needed.

As an alternative to this, LinMot offers a configuration service, which means you can store your configuration with LinMot and order the servo controller with installed firmware and configuration (parameter and curves). In many cases this will be the more cost effective solution.

For debugging reasons and to get familiar with the LinRS protocol the LinMot-Talk1100 has an integrated LinRS test tool (Tools\LinRS test Tool). Together with the USB to CAN converter the steps could be followed directly as shown below.

The screenshot shows the LinMot-Talk1100 software interface. A 'LinRS Test Tool' window is open, displaying a list of CAN bus messages:

```

Tx: 01 11 05 02 00 01 3F 00 04
Rx: 01 11 0C 02 00 00 00 B4 40 00 02 87 FB FF FF 04
Tx: 01 11 05 02 00 01 3F 00 04
Rx: 01 11 0C 02 00 00 00 B6 40 00 02 87 FB FF FF 04
Tx: 01 11 05 02 00 01 3F 08 04
Rx: 01 11 0C 02 00 00 00 B7 42 00 08 95 F5 FF FF 04
Tx: 01 11 05 02 00 01 3F 00 04
Rx: 01 11 0C 02 00 00 00 37 4C 00 09 76 FD FF FF 04
  
```

The 'Send' dialog box is open, showing the following settings:

- Port Name: COM3
- Baud Rate: 38400

The main interface shows the following monitoring data:

- Connection Status: Online
- Firmware Status: Running
- Motor Status: **Switched On**
- Op. State: **Operation Enabled**
- Actual Position: **0.00 mm**
- Demand Position: **0.00 mm**
- Force Factor: 96.88 %
- Motor Current: **-0.07 A**
- Logic Supply Volt.: **23.69 V**
- Motor Supply Volt.: **75.10 V**

The Command Interface shows the following settings:

- Command Category: Most Commonly Used
- Command Type: VAI Go To Pos (010xh)
- Count Nibble (Toggle Bits): 4h

| Name   | Offs. | Description          | Scaled Value        | Int. Value (Dec) | Int. Value (Hex) |
|--------|-------|----------------------|---------------------|------------------|------------------|
| Header | 0     | 010xh: VAI Go To Pos | 260                 | 260              | 0104h            |
| 1. Par | 2     | Target Position      | -5 mm               | -50000           | FFFF3CB0h        |
| 2. Par | 6     | Maximal Velocity     | 1 m/s               | 1000000          | 000F4240h        |
| 3. Par | 10    | Acceleration         | 10 m/s <sup>2</sup> | 1000000          | 000F4240h        |
| 4. Par | 14    | Deceleration         | 10 m/s <sup>2</sup> | 1000000          | 000F4240h        |

## 6 Response Request

The response to the response request is added to the configured response data, or set to the configured reserved space.

| Message Main ID | Message Sub ID | Description   |
|-----------------|----------------|---|
| 0x00h           | 0x00h          | Default MC Response Answer (Slave)                            |
| 0x00h           | 0x01h          | Default MC Response Request (Master)                          |
| 0x00h           | 0x02h          | Default MC Response Request with Status Word Request (Master) |
| 0x00h           | 0x03h          | Default MC Response Request with Warn Word Request (Master)   |
| 0x00h           | 0x04h          | Default MC Response Request with State Var Request (Master)   |
| 0x00h           | 0x30h          | Slave Response to Master Parameter Request                    |
| 0x00h           | 0x40h          | Slave Response to Master Curve Request                        |
| 0x00h           | 0x50h          | <i>Reserved Slave Memory Group Response</i>                   |
| 0x00h           | 0x60h          | Slave Response to Master Program Handling Request             |
| 0x00h           | 0x7yh          | Slave Response to Master Read Error Requests                  |
| 0x00h           | 0x8yh          | Slave Response to Master Command Table Request                |

Every time the controller has accepted a Message, it will respond with a message itself. Normally the response contains the configured data.

### 6.1.1.1 Configuration of the Default Response

The content of the default response can be configured, so the information for the normal operation can be adapted to the application needs. The order of the information is the same as they appear in the LinMot-Talk1100 configuration tool. The Default Response is normally responded within the time >0.5ms..<1.5ms. The bold named entries are configured in default configuration (factory setting) of the LinRS firmware installation.

| Name                        | Format         | Description  |
|-----------------------------|----------------|--|
| <b>Communication State</b>  | <b>1 bytes</b> | Status of communication (Checksum error,..) (Default Cfg)      |
| <b>Status Word</b>          | <b>2 bytes</b> | Status Word bit coded (Default Cfg)                            |
| <b>State Var</b>            | <b>2 bytes</b> | High byte state number, low byte state depending (Default Cfg) |
| Error Code                  | 2 bytes        | Error Code   |
| Warn Word                   | 2 bytes        | Warn Word bit coded  |
| Echo MC Intf Header         | 2 bytes        | Echo of the motion command interface header                    |
| <b>Monitoring Channel 1</b> | <b>4 bytes</b> | Monitoring Channel 1 Data (Default Cfg)                        |
| Monitoring Channel 2        | 4 bytes        | Monitoring Channel 2 Data                                      |
| MC Response                 | 4 bytes        | Place holder for a response request                            |

### 6.1.2 Request Default Response Example

The following example documents a default response request, the controller will answer with the configured default response. This request could be used to monitor state changes or direct variable changes.

#### Request: default response

| Byte Offset | Value | Description                               |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                     |
| 1           | 11h   | Response node ID                          |
| 2           | 03h   | Telegram length                           |
| 3           | 02h   | Fix ID start data                         |
| 4           | 01h   | Message Sub ID (default response request) |
| 5           | 00h   | Message Main ID (Response)                |
| 6           | 04h   | Fix ID telegram end                       |

#### Response: Default Response

| Byte Offset | Value | Description                         |
|-------------|-------|-------------------------------------|
| 0           | 0x01h | Fix ID telegram start               |
| 1           | 0x11h | MACID                               |
| 2           | 0x0Ch | Data length                         |
| 3           | 0x02h | Fix ID start data                   |
| 4           | 0x00h | Sub ID: Default Response            |
| 5           | 0x00h | Main ID: Response Message           |
| 6           | 0x00h | Communication State ok              |
| 7           | 0x37h | Status Word Low Byte                |
| 8           | 0x4Ch | Status Word High Byte               |
| 9           | 0xC2h | State Var Low Byte                  |
| 10          | 0x08h | State Var High Byte (MainState)     |
| 11          | 0x9Dh | Actual Position Low Word Low Byte   |
| 12          | 0xFC  | Actual Position Low Word High Byte  |
| 13          | 0xFFh | Actual Position High Word Low Byte  |
| 14          | 0xFFh | Actual Position High Word High Byte |
| 15          | 0x04h | Fix ID telegram end                 |

#### Example:

Tx: 01 11 03 02 01 00 04

Rx: 01 11 0C 02 00 00 00 37 4C C2 08 9D FC FF FF 04

### 6.1.3 Default MC Response Request with Status Word Request Example

The following example documents a Default MC Response Request with Status Word Request, the controller will answer with the configured default response and adds the Status Word in a 4Byte Container at the end of the data section.

#### Request: Default MC Response Request with Status Word Request

| Byte Offset | Value | Description                               |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                     |
| 1           | 11h   | Response node ID                          |
| 2           | 03h   | Telegram length                           |
| 3           | 02h   | Fix ID start data                         |
| 4           | 02h   | Message Sub ID (default response request) |
| 5           | 00h   | Message Main ID (Response)                |
| 6           | 04h   | Fix ID telegram end                       |

#### Response: Default MC Response Request with Status Word Request

| Byte Offset | Value | Description                               |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start                     |
| 1           | 0x11h | MACID                                     |
| 2           | 0x10h | Data length                               |
| 3           | 0x02h | Fix ID start data                         |
| 4           | 0x00h | Sub ID: Default Response with Status Word |
| 5           | 0x00h | Main ID: Response Message                 |
| 6           | 0x00h | Communication State ok                    |
| 7           | 0x37h | Status Word Low Byte                      |
| 8           | 0x4Ch | Status Word High Byte                     |
| 9           | 0xC2h | State Var Low Byte                        |
| 10          | 0x08h | State Var High Byte (MainState)           |
| 11          | 0x9Dh | Actual Position Low Word Low Byte         |
| 12          | 0xFCh | Actual Position Low Word High Byte        |
| 13          | 0xFFh | Actual Position High Word Low Byte        |
| 14          | 0xFFh | Actual Position High Word High Byte       |
| 15          | 0xB4h | Low Byte Status Word                      |
| 16          | 0x00h | High Byte Status Word                     |
| 17          | 0x00h | No Meaning                                |
| 18          | 0x00h | No Meaning                                |
| 19          | 0x04h | Fix ID telegram end                       |

#### Examples:

Tx: 01 11 03 02 02 00 04 ; Request Default Response with Status Word  
 Rx: 01 11 10 02 00 00 00 B4 00 00 02 D5 6A 10 00 **B4 00** 00 00 04  
 Tx: 01 11 03 02 03 00 04 ; Request Default Response with Warn Word  
 Rx: 01 11 10 02 00 00 00 B4 00 00 02 D5 6A 10 00 **80 00** 00 00 04  
 Tx: 01 11 03 02 04 00 04 ; Request Default Response with State Var  
 Rx: 01 11 10 02 00 00 00 B4 00 00 02 D5 6A 10 00 **00 02** 00 00 04



## 7 Write Control Word

With the access to the control Word the main state machine could be controlled.

| Message Main ID | Message Sub ID | Description        |
|-----------------|----------------|--------------------|
| 0x01h           | 0x00h          | Write Wontrol Word |

With the following examples the first steps in runtime programming should be explained. To this message request the LinMot servo controller will always answer with the default motion response.

### 7.1 Write Control Word example 1

With this control word command the lock state is cleared

#### Request: Write Control Word (Clear Control Word)

| Byte Offset | Value | Description                          |
|-------------|-------|--------------------------------------|
| 0           | 01h   | Fix ID Telegram start                |
| 1           | 11h   | Destination node ID                  |
| 2           | 05h   | Telegram length                      |
| 3           | 02h   | Fix ID start data                    |
| 4           | 00h   | Message Sub ID                       |
| 5           | 01h   | Message Main ID (Write Control Word) |
| 6           | 00h   | Control Word Low Byte                |
| 7           | 00h   | Control Word High Byte               |
| 8           | 04h   | Fix ID telegram end                  |

This request is answered with the Default Response.

#### Example:

Tx: 01 11 05 02 00 01 00 00 04

Rx: 01 11 0C 02 00 00 00 B4 40 00 02 AB 00 00 00 04

## 7.2 Write Control Word example 2

With this control word command causes a transition to enable state and starts homing.

### Request: Write Control Word (Set all Bits for Operation and Home Flag)

| Byte Offset | Value | Description                          |
|-------------|-------|--------------------------------------|
| 0           | 01h   | Fix ID Telegram start                |
| 1           | 11h   | Destination node ID                  |
| 2           | 05h   | Telegram length                      |
| 3           | 02h   | Fix ID start data                    |
| 4           | 00h   | Message Sub ID                       |
| 5           | 01h   | Message Main ID (Write Control Word) |
| 6           | 3Fh   | Control Word Low Byte                |
| 7           | 08h   | Control Word High Byte               |
| 8           | 04h   | Fix ID telegram end                  |

#### Example:

Tx: 01 11 05 02 00 01 3F 08 04

Rx: 01 11 0C 02 00 00 00 B6 40 00 02 A8 00 00 00 04

To detect when the homing sequence has finished, poll the controller until the low byte in the StateVar is 0Fh and the main state = 09h (homing) high byte of the state var.

#### Example:

Rx: 01 11 0C 02 00 00 00 B7 22 01 09 65 0E FB FF 04

Tx: 01 11 05 02 00 01 3F 08 04

Rx: 01 11 0C 02 00 00 00 B7 22 01 09 8B A3 F7 FF 04

Tx: 01 11 05 02 00 01 3F 08 04

Rx: 01 11 0C 02 00 00 00 B7 62 0C 09 4D 24 FF FF 04

Tx: 01 11 05 02 00 01 3F 08 04

Rx: 01 11 0C 02 00 00 00 37 4C **0F 09** DA FB FF FF 04 -> Homing finished

### 7.3 Write Control Word example 3

With this control word command the normal operation is enabled.

#### Request: Write Control Word (Set all Bits for Operation and Reset Home Flag)

| Byte Offset | Value | Description                          |
|-------------|-------|--------------------------------------|
| 0           | 01h   | Fix ID Telegram start                |
| 1           | 11h   | Destination node ID                  |
| 2           | 05h   | Telegram length                      |
| 3           | 02h   | Fix ID start data                    |
| 4           | 00h   | Message Sub ID                       |
| 5           | 01h   | Message Main ID (Write Control Word) |
| 6           | 3Fh   | Control Word Low Byte                |
| 7           | 00h   | Control Word High Byte               |
| 8           | 04h   | Fix ID telegram end                  |

#### Example:

Tx: 01 11 05 02 00 01 3F 00 04

Rx: 01 11 0C 02 00 00 00 37 4C 00 09 3C FC FF FF 04

Poll again to make sure main state 08h is reached.

Tx: 01 11 05 02 00 01 3F 00 04

Rx: 01 11 0C 02 00 00 00 37 4C **C0 08** DA FB FF FF 04 -> 'Operation Enabled' state reached with homed flag set

## 8 Write Motion Command Interface

With the access to the Motion Command Interface of the MC-SW [1], the run time motion could be controlled. There are a lot of different motion commands which are described in [1] for the different needs of the applications.

| Message Main ID | Message Sub ID | Description                    |
|-----------------|----------------|--------------------------------|
| 0x02h           | 0x00h          | Write Motion Control Interface |

### 8.1 Write Motion Command Interface example 1

With this motion command a VA-interpolator motion with default parameters for (max velocity and acceleration and deceleration) to the target position 10mm is defined.

| Byte Offset | Value | Description  |
|-------------|-------|--|
| 0           | 01h   | Fix ID Telegram start                                |
| 1           | 11h   | Destination node ID                                  |
| 2           | 09h   | Telegram length                                      |
| 3           | 02h   | Fix ID start data                                    |
| 4           | 00h   | Message Sub ID                                       |
| 5           | 02h   | Message Main ID (Motion Command Interface)           |
| 6           | 01h   | Motion Cmd Intf Header Low Byte (count =1) Sub ID =0 |
| 7           | 02h   | Motion Cmd Intf Header High Byte Master ID =2        |
| 8           | A0h   | Target Position lowest byte                          |
| 9           | 86h   | Target Position middle low byte                      |
| 10          | 01h   | Target Position middle high byte                     |
| 11          | 00h   | Target Position highest byte                         |
| 12          | 04h   | Fix ID telegram end                                  |

**Example:**

Tx: 01 11 09 02 00 02 01 02 A0 86 01 00 04

Rx: 01 11 0C 02 00 00 00 37 68 A1 08 8B FC FF FF 04

## 8.2 Write Motion Command Interface example 2

Go back with the same motion command to 0mm.

| Byte Offset | Value | Description  |
|-------------|-------|--|
| 0           | 01h   | Fix ID Telegram start                                |
| 1           | 11h   | Destination node ID                                  |
| 2           | 09h   | Telegram length                                      |
| 3           | 02h   | Fix ID start data                                    |
| 4           | 00h   | Message Sub ID                                       |
| 5           | 02h   | Message Main ID (Motion Command Interface)           |
| 6           | 02h   | Motion Cmd Intf Header Low Byte (count =1) Sub ID =0 |
| 7           | 02h   | Motion Cmd Intf Header High Byte Master ID =2        |
| 8           | 00h   | Target Position lowest byte                          |
| 9           | 00h   | Target Position middle low byte                      |
| 10          | 00h   | Target Position middle high byte                     |
| 11          | 00h   | Target Position highest byte                         |
| 12          | 04h   | Fix ID telegram end                                  |

Tx: 01 11 09 02 00 02 02 02 00 00 00 00 04

Rx: 01 11 0C 02 00 00 00 37 28 A2 08 5E 81 01 00 04

With the next example the VAI motion command with defined Position, Max Velocity, Acceleration and Deceleration is used. The message length is increased to 0x15h, to debug the send data push the read button in the Control Panel.

Tx: 01 11 15 02 00 02 03 01 F0 49 02 00 40 42 0F 00 40 42 0F 00 40 42 0F 00 04

Rx: 01 11 0C 02 00 00 00 37 0D D3 08 F3 49 02 00 04

| Name   | Offs. | Description          | Scaled Value        | Int. Value (Dec) | Int. Value (Hex) |
|--------|-------|----------------------|---------------------|------------------|------------------|
| Header | 0     | 010xh: VAI Go To Pos | 259                 | 259              | 0103h            |
| 1. Par | 2     | Target Position      | 15 mm               | 150000           | 000249F0h        |
| 2. Par | 6     | Maximal Velocity     | 1 m/s               | 1000000          | 000F4240h        |
| 3. Par | 10    | Acceleration         | 10 m/s <sup>2</sup> | 1000000          | 000F4240h        |
| 4. Par | 14    | Deceleration         | 10 m/s <sup>2</sup> | 1000000          | 000F4240h        |



Tx: 01 11 15 02 00 02 04 01 B0 3C FF FF 40 42 0F 00 40 42 0F 00 40 42 0F 00 04

Rx: 01 11 0C 02 00 00 00 37 49 94 08 61 3D FF FF 04

| Name   | Offs. | Description          | Scaled Value        | Int. Value (Dec) | Int. Value (Hex) |
|--------|-------|----------------------|---------------------|------------------|------------------|
| Header | 0     | 010xh: VAI Go To Pos | 260                 | 260              | 0104h            |
| 1. Par | 2     | Target Position      | -5 mm               | -50000           | FFF3CB0h         |
| 2. Par | 6     | Maximal Velocity     | 1 m/s               | 1000000          | 000F4240h        |
| 3. Par | 10    | Acceleration         | 10 m/s <sup>2</sup> | 1000000          | 000F4240h        |
| 4. Par | 14    | Deceleration         | 10 m/s <sup>2</sup> | 1000000          | 000F4240h        |

## 9 Parameter Group

With the parameter group, parameter can be changed or read. Within the MC SW two different kinds of parameters are supported:

- Live Parameters (during MC runtime, Message Sub ID's 0x00h and 0x01h)
- Configuration Parameters

While live parameters can be changed during the MC SW is running the configuration parameters affects the behavior of its SW instance only after a restart of it. A Reset command or Power cycle restarts all SW instances.

The Parameters are accessed with a 16 Bit Unique Parameter ID (UPID). All parameters values are mapped in a 4 byte value memory area. With bit parameters the lowest bit of parameter value memory field is relevant, a byte parameter in the lowest byte and word parameter into the two lower bytes.

| Message Main ID | Message Sub ID | Description   |
|-----------------|----------------|---|
| 0x03h           | 0x00h          | Read RAM value with MC Default Response                   |
| 0x03h           | 0x01h          | Write RAM value with MC Default Response                  |
| 0x03h           | 0x02h          | Read ROM value with MC Default Response                   |
| 0x03h           | 0x03h          | Write ROM value with MC Default Response                  |
| 0x03h           | 0x04h          | Write RAM and ROM value with MC Default Response          |
| 0x03h           | 0x05h          | Get minimal value of parameter with MC Default Response   |
| 0x03h           | 0x06h          | Get maximal value of parameter with MC Default Response   |
| 0x03h           | 0x07h          | Get default value of parameter with MC Default Response   |
|                 |                |   |
| 0x03h           | 0x11h          | Set OS (Operating System) ROM parameter values to default |
| 0x03h           | 0x12h          | Set MC (Motion Control) ROM parameter values to default   |
| 0x03h           | 0x13h          | Set Interface ROM parameter values to default             |
| 0x03h           | 0x14h          | Set Application ROM parameter values to default           |

### 9.1 Parameter/Variable Read RAM example

With command the RAM value of the UPID 5026 (13A2h P Gain Position Controller) is read. With the default MC response the requested value is added in the last 4 bytes of it.

| Byte Offset | Value | Description                                 |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                       |
| 1           | 11h   | Destination node ID                         |
| 2           | 05h   | Telegram length                             |
| 3           | 02h   | Fix ID start data                           |
| 4           | 00h   | Message Sub ID (Read Ram Value)             |
| 5           | 03h   | Message Main ID (Parameter)                 |
| 6           | A2h   | UPID Low Byte (P Gain Position Controller)  |
| 7           | 13h   | UPID High Byte (P Gain Position Controller) |
| 8           | 04h   | Fix ID telegram end                         |

Tx: 01 11 05 02 00 03 A2 13 04

Rx: 01 11 10 02 00 00 00 37 4C C2 08 AA 06 00 00 **0A 00 00 00** 04

### 9.2 Parameter Write RAM example

With command the RAM value of the UPID 5026 (13A2h P Gain Position Controller) is changed to 11.

| Byte Offset | Value | Description                                 |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                       |
| 1           | 11h   | Destination node ID                         |
| 2           | 09h   | Telegram length                             |
| 3           | 02h   | Fix ID start data                           |
| 4           | 00h   | Message Sub ID (Read Ram Value)             |
| 5           | 03h   | Message Main ID (Parameter)                 |
| 6           | A2h   | UPID Low Byte (P Gain Position Controller)  |
| 7           | 13h   | UPID High Byte (P Gain Position Controller) |
| 8           | 0Bh   | Parameter value low word low byte           |
| 9           | 00h   | Parameter value low word high byte          |
| 10          | 00h   | Parameter value high word low byte          |
| 11          | 00h   | Parameter value high word high byte         |
| 12          | 04h   | Fix ID telegram end                         |

Tx: 01 11 09 02 01 03 A2 13 0B 00 00 00 04

Rx: 01 11 0C 02 00 00 00 37 4C C0 08 BF FB FF FF 04

Reading the parameter again shows the changed value:

Tx: 01 11 05 02 00 03 A2 13 04

Rx: 01 11 10 02 00 00 00 37 4C C0 08 BF FB FF FF **0B 00 00 00** 04

Reading the ROM value of the same parameter shows that it is still unchanged 0Ah.

Tx: 01 11 05 02 02 03 A2 13 04

Rx: 01 11 10 02 00 00 00 37 4C C0 08 BF FB FF FF **0A 00 00 00** 04

Write 12 (0x0Ch) to the ROM value of the same parameter.

Tx: 01 11 09 02 03 03 A2 13 0C 00 00 00 04

Rx: 01 11 0C 02 00 00 00 37 4C C2 08 AB 09 00 00 04

Reading the ROM value of the same parameter shows that it is still unchanged 0Ch. This change will affect the position controller behavior only after a restart of the MC-SW, for this reason it is recommended to change the ROM values only in the stopped MC-SW mode.

Tx: 01 11 05 02 02 03 A2 13 04

Rx: 01 11 10 02 00 00 00 37 4C C2 08 AB 09 00 00 0C 00 00 00 04

The following sequence shows the behavior of the write RAM and ROM command ( Message Sub ID 04h) to the same parameter with UPID 13A2h P-Gain Position controller Set A.

Write 09h to Ram and ROM

Tx: 01 11 09 02 04 03 A2 13 **09 00 00 00** 04

Rx: 01 11 0C 02 00 00 00 37 4C C2 08 95 09 00 00 04

Reading changed RAM value

Tx: 01 11 05 02 00 03 A2 13 04

Rx: 01 11 10 02 00 00 00 37 4C C2 08 EB 09 00 00 09 00 00 00 04

Reading changed ROM value

Tx: 01 11 05 02 02 03 A2 13 04

Rx: 01 11 10 02 00 00 00 37 4C C2 08 95 09 00 00 09 00 00 00 04



## 10 Parameter Configuration Group

The parameter Configuration Group Messages could be used to read out a configuration, and/or write a configuration . For configuring it is needed to stop the MC-SW of the servo controller first (Programm Handling Message Group), and after configuring the controller (re)start the MC-SW again.

| Message Main ID | Message Sub ID | Description   |
|-----------------|----------------|---|
| 0x05h           | 0x00h          | Read ROM value  |
| 0x05h           | 0x01h          | Write ROM value   |
| 0x05h           | 0x04h          | Get parameter type  |
| 0x05h           | 0x05h          | Get minimal value of parameter                            |
| 0x05h           | 0x06h          | Get maximal value of parameter                            |
| 0x05h           | 0x07h          | Get default value of parameter                            |
| 0x05h           | 0x08h          | Start Get Modified UPID List                              |
| 0x05h           | 0x09h          | Get Next Modified UPID                                    |
| 0x05h           | 0x0Ah          | Start Get UPID List                                       |
| 0x05h           | 0x0Bh          | Get Next UPID   |
| 0x05h           | 0x0Ch          | Set OS (Operating System) ROM parameter values to default |
| 0x05h           | 0x0Dh          | Set MC (Motion Control) ROM parameter values to default   |
| 0x05h           | 0x0Eh          | Set Interface ROM parameter values to default             |
| 0x05h           | 0x0Fh          | Set Application ROM parameter values to default           |

Supported Parameter Types:

| Type Code | Bit Length | Description                              |
|-----------|------------|--|
| 00h       | 1          | BOOL                                     |
| 01h       | 8          | UINT8                                    |
| 02h       | 8          | SINT8                                    |
| 03h       | 16         | UINT16                                   |
| 04h       | 16         | SINT16                                   |
| 05h       | 32         | UINT32                                   |
| 06h       | 32         | SINT32                                   |
| 07h       | 32         | LIN_FLOAT ( not used as parameter)       |
| 08h       | #Char x 8  | STRING                                   |
| 09h       | #Char x 8  | CAP_DIR                                  |
| 0Ah       | 1          | RADIO_DIR_BIT                            |
| 0Bh       | 16         | RADIO_DIR16                              |
| 0Ch       | 8          | ENUM_DIR8                                |
| 0Dh       | 16         | ENUM_DIR16                               |
| 0Eh       | 32         | STRINGLET (Part of String 4 Characters)  |
| 0Fh       | 32         | CAP_DIRLET (Part of String 4 Characters) |

Address Usage:

|    |    |    |                                     |    |    |   |   |                |   |   |   |   |           |          |           |          |
|----|----|----|-------------------------------------|----|----|---|---|----------------|---|---|---|---|-----------|----------|-----------|----------|
|    |    |    | Not used for<br>hash<br>calculation |    |    |   |   | Life Parameter |   |   |   |   | ROM Write | ROM Read | RAM Write | RAM Read |
| 15 | 14 | 13 | 12                                  | 11 | 10 | 9 | 8 | 7              | 6 | 5 | 4 | 3 | 2         | 1        | 0         |          |

### 10.1 Parameter Configuration Read ROM value example

With command the RAM value of the UPID 5026 (13A2h P Gain Position Controller) is read. With the default MC response the requested value is added in the last 4 bytes of it.

#### Request: Read ROM value of UPID

| Byte Offset | Value | Description                                 |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                       |
| 1           | 11h   | Destination node ID                         |
| 2           | 05h   | Telegram length                             |
| 3           | 02h   | Fix ID start data                           |
| 4           | 00h   | Message Sub ID (Cfg Read ROM Value)         |
| 5           | 05h   | Message Main ID (Parameter Configuration)   |
| 6           | A2h   | UPID Low Byte (P Gain Position Controller)  |
| 7           | 13h   | UPID High Byte (P Gain Position Controller) |
| 8           | 04h   | Fix ID telegram end                         |

#### Configuration Response: Read ROM value of UPID

| Byte Offset | Value | Description                                  |
|-------------|-------|--|
| 0           | 01h   | Fix ID Telegram start                        |
| 1           | 11h   | Destination node ID                          |
| 2           | 0Ah   | Telegram length                              |
| 3           | 02h   | Fix ID start data                            |
| 4           | 50h   | Message Sub ID (Cfg Read ROM Value Response) |
| 5           | 00h   | Message Main ID (Response)                   |
| 6           | 00h   | Communication state                          |
| 7           | A2h   | UPID Low Byte (P Gain Position Controller)   |
| 8           | 13h   | UPID High Byte (P Gain Position Controller)  |
| 9           | 09h   | Parameter value low word low byte            |
| 10          | 00h   | Parameter value low word high byte           |
| 11          | 00h   | Parameter value high word low byte           |
| 12          | 00h   | Parameter value high word high byte          |
| 13          | 04h   | Fix ID telegram end                          |

#### Examples:

Stopping MC SW:

Tx: 01 11 03 02 03 06 04

Rx: 01 11 0C 02 00 00 00 00 00 00 87 00 00 00 04 ; MC default response

Reading the P Gain Position Controller Set A (UPID: 0x13A2h) ROM value:

Tx: 01 11 05 02 00 05 A2 13 04

Rx: 01 11 0A 02 50 00 00 A2 13 **09 00 00 00** 04

Writing 16=0x00000010h the P Gain Position Controller Set A (UPID: 0x13A2h) ROM value:

Tx: 01 11 09 02 01 05 A2 13 10 00 00 00 04

Rx: 01 11 0A 02 51 00 00 A2 13 10 00 00 00 04

Reading again the P Gain Position Controller Set A (UPID: 0x13A2h) ROM value:

Tx: 01 11 05 02 00 05 A2 13 04

Rx: 01 11 0A 02 50 00 00 A2 13 **10 00 00 00** 04

Reading the Parameter Type P Gain Position Controller Set A (UPID: 0x13A2h):

Tx: 01 11 05 02 04 05 A2 13 04

Rx: 01 11 0A 02 54 00 00 A2 13 **03** 00 00 00 04 ; Par Type UINT16

Reading Min Value the P Gain Position Controller Set A (UPID: 0x13A2h):

Tx: 01 11 05 02 05 05 A2 13 04

Rx: 01 11 0A 02 55 00 00 A2 13 **00 00 00 00** 04

Reading Max Value the P Gain Position Controller Set A (UPID: 0x13A2h):

Tx: 01 11 05 02 06 05 A2 13 04

Rx: 01 11 0A 02 56 00 00 A2 13 **FF FF 00 00** 04

Reading Default Value the P Gain Position Controller Set A (UPID: 0x13A2h):

Tx: 01 11 05 02 07 05 A2 13 04

Rx: 01 11 0A 02 57 00 00 A2 13 **0F 00 00 00** 04

## 10.2 Parameter Configuration read out changed Parameters

With commands 'Start Get Modified UPID List' and 'Get Next Modified UPID' for each SW layer the changed parameters of the actual configuration could be read out the servo controller. With this functionality the whole parameter configuration of the servo controller could be read out and stored in the PC/PLC.

Each firmware layer has its own range of UPIDs for its parameters.

| Layer | UPID Range    | Layer name         |
|-------|---------------|--------------------|
| 1     | 0000h...0EFFh | Operating System   |
| 2     | 1000h...1EFFh | Motion Control SW  |
| 3     | 2000h...2EFFh | Interface Software |
| 4     | 3000h...3EFFh | Application        |

In the following example the changed parameters of the Intf SW (LinRS), in the example the 4 listed UPID's are changed:

UPID: 0x200Eh, Baud Rate Source Select, Value: 0x00000002h, By Parameter

UPID: 0x2012h, Baud Rate Parameter Def, Value: 0x00000008h, 38400 Baud

UPID: 0x206Ch, MACID Source Select, Value: 0x00000003h, By Parameter

UPID: 0x2076h, MACID Parameter Value, Value: 0x00000011h, MACID

```

Tx: 01 11 05 02 08 05 00 20 04 ; init read out changed Intf Par (LinRS)
Rx: 01 11 0A 02 58 00 00 00 20 00 00 00 00 04
Tx: 01 11 05 02 09 05 00 20 04 ; get next changed Intf parameter
Rx: 01 11 0A 02 59 00 00 0E 20 02 00 00 00 04 ; UPID: 0x200E, Value; 0x00000002h
Tx: 01 11 05 02 09 05 00 20 04 ; get next changed Intf parameter
Rx: 01 11 0A 02 59 00 00 12 20 08 00 00 00 04 ; UPID: 0x2012, Value; 0x00000008h
Tx: 01 11 05 02 09 05 00 20 04 ; get next changed Intf parameter
Rx: 01 11 0A 02 59 00 00 6C 20 03 00 00 00 04 ; UPID: 0x206C, Value; 0x00000003h
Tx: 01 11 05 02 09 05 00 20 04 ; get next changed Intf parameter
Rx: 01 11 0A 02 59 00 00 76 20 11 00 00 00 04 ; UPID: 0x2076, Value; 0x00000011h
Tx: 01 11 05 02 09 05 00 20 04 ; get next changed Intf parameter
Rx: 01 11 0A 02 59 00 C6 C7 20 01 00 00 00 04 ; UPID: 0x20C7, Value; 0x00000001h
The Communication state C6h indicates, that this was the last parameter
    
```

To read out the changed parameters of MC-SW layer start as follows

Tx: 01 11 05 02 08 05 **00 10** 04 ; init read out changed MC-SW Par

Rx: 01 11 0A 02 58 00 00 00 10 00 00 00 00 04

Tx: 01 11 05 02 09 05 00 00 04 ; get next changed parameter

Rx: 01 11 0A 02 59 00 00 37 10 07 00 00 00 04 ; UPID: 0x1037, Value; 0x00000007h

### 10.3 Parameter Configuration Read out UPID List

With command the RAM value of the UPID 5026 (13A2h P Gain Position Controller) is read. With the default MC response the requested value is added in the last 4 bytes of it.

#### Request: Get Next UPID

| Byte Offset | Value | Description                               |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                     |
| 1           | 11h   | Destination node ID                       |
| 2           | 05h   | Telegram length                           |
| 3           | 02h   | Fix ID start data                         |
| 4           | 0Bh   | Message Sub ID (Get Next UPID)            |
| 5           | 05h   | Message Main ID (Parameter Configuration) |
| 6           | 00h   | Not used, don't have to be transmitted    |
| 7           | 00h   | Not used, don't have to be transmitted    |
| 8           | 04h   | Fix ID telegram end                       |

#### Configuration Response: Get Next UPID

| Byte Offset | Value | Description                            |
|-------------|-------|--|
| 0           | 01h   | Fix ID Telegram start                  |
| 1           | 11h   | Destination node ID                    |
| 2           | 0Ah   | Telegram length                        |
| 3           | 02h   | Fix ID start data                      |
| 4           | 5Bh   | Message Sub ID (Cfg Read ROM Value)    |
| 5           | 00h   | Message Main ID (Response)             |
| 6           | 00h   | Communication state                    |
| 7           | A2h   | Found UPID Low Byte                    |
| 8           | 13h   | Found UPID High Byte                   |
| 9           | 09h   | Address Usage low byte of found UPID   |
| 10          | 00h   | Address Usage high byte of found UPID  |
| 11          | 00h   | Parameter Type low byte of found UPID  |
| 12          | 00h   | Parameter Type high byte of found UPID |
| 13          | 04h   | Fix ID telegram end                    |

The following example shows principle of reading the UPID List of a SW instance, if generating a configuration out of this list all UPIDs with the 'ROM write' address usage bit set have to be read out with the get ROM value command.

```
Tx: 01 11 05 02 0A 05 00 20 04 ; start Get UPID List Intf SW layer
Rx: 01 11 0A 02 5A 00 00 00 20 00 00 00 00 04
Tx: 01 11 05 02 0B 05 00 20 04
Rx: 01 11 0A 02 5B 00 00 08 20 0D 00 0A 00 04 ; UPID 2008h, AU: 000Dh Type: 000Ah
...
Tx: 01 11 05 02 0B 05 00 20 04
Rx: 01 11 0A 02 5B 00 00 36 21 01 10 03 00 04 ; UPID 2136h, AU: 1001h Type: 0003h
Tx: 01 11 05 02 0B 05 00 20 04
Rx: 01 11 0A 02 5B 00 00 37 21 01 10 03 00 04 ; UPID 2137h, AU: 1001h Type: 0003h
Tx: 01 11 05 02 0B 05 00 20 04
Rx: 01 11 0A 02 5B 00 C6 37 21 01 10 03 00 04 ; UPID 2137h, AU: 1001h Type: 0003h
```

#### **10.4 Parameter Configuration Defaulting SW-Instance Parameters**

Before writing the parameters of a SW instance it is advised to set all parameters of the corresponding SW instance to default values. This could be done with a single parameter configuration message. The response is given after the defaulting of the Sw instance is completed could be more than 1s.

##### **Examples:**

Defaulting the parameters of the OS-SW:

```
Tx: 01 11 05 02 0C 05 00 00 04
Rx: 01 11 0A 02 5C 00 00 00 00 01 00 00 00 04
```

Defaulting the parameters of the MC-SW:

```
Tx: 01 11 05 02 0D 05 00 00 04
Rx: 01 11 0A 02 5D 00 00 00 00 02 00 00 00 04
```

Defaulting the parameters of the Intf-SW:

```
Tx: 01 11 05 02 0E 05 00 00 04
Rx: 01 11 0A 02 5E 00 00 00 00 03 00 00 00 04
```

Defaulting the parameters of the Appl-SW:

```
Tx: 01 11 05 02 0F 05 00 00 04
Rx: 01 11 0A 02 5F 00 00 00 00 04 00 00 00 04
```

## 11 Curve Configuration Message Group

With the Curve Message Group, curves can be read out or written from/to the servo controller. To store a new curves in the ROM the MC SW layer has to be stopped.

| Message Main ID | Message Sub ID | Description   |
|-----------------|----------------|---|
| 0x04h           | 0x00h          | Save Curves from RAM to FLASH (MC SW has to be stopped)       |
| 0x04h           | 0x01h          | Delete all Curves in RAM                                      |
| 0x04h           | 0x02h          | Delete Curve in RAM   |
| 0x04h           | 0x04h          | Add Curve to RAM (Define Info Block Size and Data Block Size) |
| 0x04h           | 0x05h          | Write Curve Info Block  |
| 0x04h           | 0x06h          | Write Curve Data Block  |
| 0x04h           | 0x08h          | Read Curve Info Block Size and Data Block Size                |
| 0x04h           | 0x09h          | Read Curve Info Block   |
| 0x04h           | 0x0Ah          | Read Curve Data Block   |

### Request: Save Curves from RAM to FLASH

| Byte Offset | Value | Description                                    |
|-------------|-------|--|
| 0           | 01h   | Fix ID Telegram start                          |
| 1           | 11h   | Destination node ID                            |
| 2           | 03h   | Telegram length                                |
| 3           | 02h   | Fix ID start data                              |
| 4           | 00h   | Message Sub ID (Save curves from RAM to FLASH) |
| 5           | 04h   | Message Main ID (Curve Message)                |
| 6           | 04h   | Fix ID telegram end                            |

### Configuration Response: Save Curves from RAM to FLASH

| Byte Offset | Value | Description                                   |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                         |
| 1           | 11h   | Destination node ID                           |
| 2           | 0Ah   | Telegram length                               |
| 3           | 02h   | Fix ID start data                             |
| 4           | 40h   | Message Sub ID (Curve Cfg Response)           |
| 5           | 00h   | Message Main ID (Response)                    |
| 6           | 00h   | Communication state                           |
| 7           | 00h   | No meaning (low byte curve ID)                |
| 8           | 00h   | No meaning (high byte curve ID)               |
| 9           | 09h   | No meaning (resonse data low word low byte)   |
| 10          | 00h   | No meaning (resonse data low word high byte)  |
| 11          | 00h   | No meaning (resonse data high word low byte)  |
| 12          | 00h   | No meaning (resonse data high word high byte) |
| 13          | 04h   | Fix ID telegram end                           |

### Example:

Tx: 01 11 03 02 00 04 04 ; timeout 10s

Rx: 01 11 0A 02 40 00 00 00 00 00 00 00 04

**Request: Delete all Curves in RAM**

With this command all curves defined are deleted in RAM.

| Byte Offset | Value | Description                               |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                     |
| 1           | 11h   | Destination node ID                       |
| 2           | 03h   | Telegram length                           |
| 3           | 02h   | Fix ID start data                         |
| 4           | 01h   | Message Sub ID (Delete all Curves in RAM) |
| 5           | 04h   | Message Main ID (Curve Message)           |
| 6           | 04h   | Fix ID telegram end                       |

**Configuration Response: Delete all Curves in RAM**

| Byte Offset | Value | Description                                   |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                         |
| 1           | 11h   | Destination node ID                           |
| 2           | 0Ah   | Telegram length                               |
| 3           | 02h   | Fix ID start data                             |
| 4           | 40h   | Message Sub ID (Curve Cfg Response)           |
| 5           | 00h   | Message Main ID (Response)                    |
| 6           | 00h   | Communication state                           |
| 7           | 00h   | No meaning (low byte curve ID)                |
| 8           | 00h   | No meaning (high byte curve ID)               |
| 9           | 09h   | No meaning (resonse data low word low byte)   |
| 10          | 00h   | No meaning (resonse data low word high byte)  |
| 11          | 00h   | No meaning (resonse data high word low byte)  |
| 12          | 00h   | No meaning (resonse data high word high byte) |
| 13          | 04h   | Fix ID telegram end                           |

**Example:**

Tx: 01 11 03 02 01 04 04

Rx: 01 11 0A 02 40 00 00 00 00 00 00 00 00 04



### Request: Delete Curve in RAM

With this command the curve with ID 1 defined is deleted in RAM.

| Byte Offset | Value | Description                          |
|-------------|-------|--------------------------------------|
| 0           | 01h   | Fix ID Telegram start                |
| 1           | 11h   | Destination node ID                  |
| 2           | 03h   | Telegram length                      |
| 3           | 02h   | Fix ID start data                    |
| 4           | 02h   | Message Sub ID (Delete Curve in RAM) |
| 5           | 04h   | Message Main ID (Curve Message)      |
| 6           | 01h   | Curve ID low byte                    |
| 7           | 00h   | Curve ID high byte                   |
| 8           | 04h   | Fix ID telegram end                  |

### Configuration Response: Delete Curve in RAM

| Byte Offset | Value | Description                                   |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                         |
| 1           | 11h   | Destination node ID                           |
| 2           | 0Ah   | Telegram length                               |
| 3           | 02h   | Fix ID start data                             |
| 4           | 40h   | Message Sub ID (Curve Cfg Response)           |
| 5           | 00h   | Message Main ID (Response)                    |
| 6           | 00h   | Communication state                           |
| 7           | 01h   | low byte curve ID                             |
| 8           | 00h   | high byte curve ID                            |
| 9           | 09h   | No meaning (resonse data low word low byte)   |
| 10          | 00h   | No meaning (resonse data low word high byte)  |
| 11          | 00h   | No meaning (resonse data high word low byte)  |
| 12          | 00h   | No meaning (resonse data high word high byte) |
| 13          | 04h   | Fix ID telegram end                           |

### Example:

Tx: 01 11 05 02 02 04 01 00 04

Rx: 01 11 0A 02 40 00 00 01 00 00 00 00 00 04

### 11.1 Read Curve From Servo Example

For a detailed description about the saving structure of a curve refer to [2]. In the following example the curve with ID = 1 is read from the servo controller

#### Reading Curve 1 Info Block and Data Block size:

Tx: 01 11 05 02 08 04 01 00 04

Rx: 01 11 0A 02 40 00 00 01 00 46 00 54 00 04 ; info block: 46bytes, data block: 54bytes

#### Reading Curve 1 Info Block Data:

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 **04** 01 00 46 00 03 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 15 00 04 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 53 69 6E 52 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 69 73 65 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 01 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 A0 86 01 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 1A 00 05 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 01 03 A0 86 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 01 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 40 42 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 0F 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 **04** 01 00 00 00 00 00 04

Tx: 01 11 05 02 09 04 01 00 04

Rx: 01 11 0A 02 40 00 **00** 01 00 00 00 00 00 04

**Reading Curve data 21 Position values:**

Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 **04** 01 00 00 00 00 04 ; pos value 1  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 0C 18 00 00 04 ; pos value 2  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 98 5F 00 00 04 ; pos value 3  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 E1 D4 00 00 04 ; pos value 4  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 04 75 01 00 04 ; pos value 5  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 0F 3C 02 00 04 ; pos value 6  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 1B 25 03 00 04 ; pos value 7  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 6D 2A 04 00 04 ; pos value 8  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 94 45 05 00 04 ; pos value 9  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 97 6F 06 00 04 ; pos value 10  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 20 A1 07 00 04 ; pos value 11  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 A9 D2 08 00 04 ; pos value 12  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 AC FC 09 00 04 ; pos value 13  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 D3 17 0B 00 04 ; pos value 14  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 25 1D 0C 00 04 ; pos value 15  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 31 06 0D 00 04 ; pos value 16  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 3C CD 0D 00 04 ; pos value 17  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 5F 6D 0E 00 04 ; pos value 18  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 04 01 00 A8 E2 0E 00 04 ; pos value 19  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 **04** 01 00 34 2A 0F 00 04 ; pos value 20  
 Tx: 01 11 05 02 0A 04 01 00 04  
 Rx: 01 11 0A 02 40 00 **00** 01 00 40 42 0F 00 04 ; pos value 21

## 11.2 Write Curve To Servo Example

### Write curve 1 info block size and data block size:

Tx: 01 11 09 02 04 04 01 00 46 00 54 00 04

Rx: 01 11 0A 02 40 00 00 01 00 00 00 00 04

### Write curve 1 info block data:

Tx: 01 11 09 02 05 04 01 00 46 00 03 00 04

Rx: 01 11 0A 02 40 00 **04** 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 15 00 04 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 53 69 6E 52 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 69 73 65 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 A0 86 01 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 1A 00 05 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 01 03 A0 86 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 01 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 40 42 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 0F 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 04

Tx: 01 11 09 02 05 04 01 00 00 00 00 00 04

Rx: 01 11 0A 02 40 00 **00** 01 00 00 00 00 04

**Write curve 1 data:**

```

Tx: 01 11 09 02 06 04 01 00 00 00 00 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 0C 18 00 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 98 5F 00 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 E1 D4 00 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 04 75 01 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 0F 3C 02 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 1B 25 03 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 6D 2A 04 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 94 45 05 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 97 6F 06 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 20 A1 07 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 A9 D2 08 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 AC FC 09 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 D3 17 0B 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 25 1D 0C 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 31 06 0D 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 3C CD 0D 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 5F 6D 0E 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 A8 E2 0E 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 34 2A 0F 00 04
Rx: 01 11 0A 02 40 00 04 01 00 00 00 00 00 04
Tx: 01 11 09 02 06 04 01 00 40 42 0F 00 04
Rx: 01 11 0A 02 40 00 00 01 00 00 00 00 00 04

```

| Download Window |    |                   |                 |         |                  |  |
|-----------------|----|-------------------|-----------------|---------|------------------|--|
| Name            | ID | Type              | Setpoint Wizard | Length  | No. of Setpoints |  |
| SinRise         | 1  | Position vs. Time | Sine            | 1000 ms | 21               |  |

## 12 Command Table Message Group

With the Command Table Message Group, Command table Entries can be read out or written from/to the servo controller. To store a new command table in the ROM the MC SW layer has to be stopped.

| Message Main ID | Message Sub ID | Description  |
|-----------------|----------------|--|
| 0x08h           | 0x00h          | Save Command Table from RAM to FLASH (MC SW has to be stopped) |
| 0x08h           | 0x01h          | Delete all Command Table Entries in RAM                        |
| 0x08h           | 0x02h          | Delete Command table entry                                     |
| 0x08h           | 0x03h          | Setup Write Command Table entry in RAM                         |
| 0x08h           | 0x04h          | Write Command Table entry data in RAM                          |
| 0x08h           | 0x05h          | Setup Read Command Table Entry                                 |
| 0x08h           | 0x06h          | Read Command Table entry data                                  |
| 0x08h           | 0x07h          | Get Command Table defined entry list                           |

### Request: Save Command Table from RAM to FLASH

| Byte Offset | Value | Description                                |
|-------------|-------|--|
| 0           | 01h   | Fix ID Telegram start                      |
| 1           | 11h   | Destination node ID                        |
| 2           | 03h   | Telegram length                            |
| 3           | 02h   | Fix ID start data                          |
| 4           | 00h   | Message Sub ID (Save CT from RAM to FLASH) |
| 5           | 08h   | Message Main ID (CT Message)               |
| 6           | 04h   | Fix ID telegram end                        |

### Configuration Response: Save Command Table from RAM to FLASH

| Byte Offset | Value | Description                                     |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                           |
| 1           | 11h   | Destination node ID                             |
| 2           | 0Ah   | Telegram length                                 |
| 3           | 02h   | Fix ID start data                               |
| 4           | 80h   | Message Sub ID (CT Flashing completed Response) |
| 5           | 00h   | Message Main ID (Response)                      |
| 6           | 00h   | Communication state                             |
| 7           | 00h   | No meaning (low CT entry ID)                    |
| 8           | 00h   | No meaning (high CT entry ID)                   |
| 9           | 00h   | No meaning (resonse data low word low byte)     |
| 10          | 00h   | No meaning (resonse data low word high byte)    |
| 11          | 00h   | No meaning (resonse data high word low byte)    |
| 12          | 00h   | No meaning (resonse data high word high byte)   |
| 13          | 04h   | Fix ID telegram end                             |

#### Example:

Tx: 01 11 03 02 00 08 04 ; timeout 10s

Rx: 01 11 0A 02 80 00 00 00 00 00 00 04

**Request: Delete all Command Table Entries in RAM**

| Byte Offset | Value | Description                                   |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                         |
| 1           | 11h   | Destination node ID                           |
| 2           | 03h   | Telegram length                               |
| 3           | 02h   | Fix ID start data                             |
| 4           | 01h   | Message Sub ID (Delete all CT Entries in RAM) |
| 5           | 08h   | Message Main ID (CT Message)                  |
| 6           | 04h   | Fix ID telegram end                           |

**Configuration Response: Delete all Command Table Entries in RAM**

| Byte Offset | Value | Description                                   |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                         |
| 1           | 11h   | Destination node ID                           |
| 2           | 0Ah   | Telegram length                               |
| 3           | 02h   | Fix ID start data                             |
| 4           | 81h   | Message Sub ID (Delete all CT Entries in RAM) |
| 5           | 00h   | Message Main ID (Response)                    |
| 6           | 00h   | Communication state                           |
| 7           | 00h   | No meaning (low byte CT entry ID)             |
| 8           | 00h   | No meaning (high byte CT entry ID)            |
| 9           | 00h   | No meaning (resonse data low word low byte)   |
| 10          | 00h   | No meaning (resonse data low word high byte)  |
| 11          | 00h   | No meaning (resonse data high word low byte)  |
| 12          | 00h   | No meaning (resonse data high word high byte) |
| 13          | 04h   | Fix ID telegram end                           |

**Example:**

Tx: 01 11 03 02 01 08 04

Rx: 01 11 0A 02 81 00 00 00 00 00 00 00 04

**Request: Delete Command Table Entry in RAM**

| Byte Offset | Value | Description                             |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                   |
| 1           | 11h   | Destination node ID                     |
| 2           | 03h   | Telegram length                         |
| 3           | 02h   | Fix ID start data                       |
| 4           | 02h   | Message Sub ID (Delete CT Entry in RAM) |
| 5           | 08h   | Message Main ID (CT Message)            |
| 6           | 02h   | Low byte CT entry ID                    |
| 7           | 00h   | High byte CT entry ID                   |
| 8           | 04h   | Fix ID telegram end                     |

**Configuration Response: Delete Command Table Entry in RAM**

| Byte Offset | Value | Description                                     |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                           |
| 1           | 11h   | Destination node ID                             |
| 2           | 0Ah   | Telegram length                                 |
| 3           | 02h   | Fix ID start data                               |
| 4           | 82h   | Message Sub ID (CT Flashing completed Response) |
| 5           | 00h   | Message Main ID (Response)                      |
| 6           | 00h   | Communication state                             |
| 7           | 02h   | Low byte CT entry ID                            |
| 8           | 00h   | High byte CT entry ID                           |
| 9           | 00h   | No meaning (response data low word low byte)    |
| 10          | 00h   | No meaning (response data low word high byte)   |
| 11          | 00h   | No meaning (response data high word low byte)   |
| 12          | 00h   | No meaning (response data high word high byte)  |
| 13          | 04h   | Fix ID telegram end                             |

**Example:**

Tx: 01 11 05 02 02 08 02 00 04

Rx: 01 11 0A 02 82 00 00 02 00 00 00 00 00 04



**Request: Get Command Table Defined Entry List**

| Byte Offset | Value | Description                             |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start                   |
| 1           | 11h   | Destination node ID                     |
| 2           | 05h   | Telegram length                         |
| 3           | 02h   | Fix ID start data                       |
| 4           | 07h   | Message Sub ID (Delete CT Entry in RAM) |
| 5           | 08h   | Message Main ID (CT Message)            |
| 6           | 00h   | Low byte CT entry ID 0..7               |
| 7           | 00h   | High byte CT entry ID                   |
| 8           | 04h   | Fix ID telegram end                     |

**Configuration Response: Get Command Table Defined Entry List**

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 01h   | Fix ID Telegram start   |
| 1           | 11h   | Destination node ID   |
| 2           | 0Ah   | Telegram length   |
| 3           | 02h   | Fix ID start data   |
| 4           | 82h   | Message Sub ID (CT Flashing completed Response)                   |
| 5           | 00h   | Message Main ID (Response)  |
| 6           | 00h   | Communication state   |
| 7           | 00h   | Low byte CT entry List ID   |
| 8           | 00h   | High byte CT entry ID   |
| 9           | 89h   | Entry List 0..7 bit = 0 entry exists, bit = 1 entry not defined   |
| 10          | 00h   | Entry List 8..15 bit = 0 entry exists, bit = 1 entry not defined  |
| 11          | 00h   | Entry List 16..23 bit = 0 entry exists, bit = 1 entry not defined |
| 12          | 00h   | Entry List 24..31 bit = 0 entry exists, bit = 1 entry not defined |
| 13          | 04h   | Fix ID telegram end   |

**Example:**

Tx: 01 11 09 02 07 08 00 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 00 00 89 FF FF FF 04 ; CT entry list 0..31; 1,2,4,5,6 defined  
 Tx: 01 11 09 02 07 08 01 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 01 00 FF FF FF FF 04 ; CT entry list 32..63; no entry defined  
 Tx: 01 11 09 02 07 08 02 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 02 00 FF FF FF FF 04 ; CT entry list 64..95; no entry defined  
 Tx: 01 11 09 02 07 08 03 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 03 00 FF FF FF FF 04 ; CT entry list 96..127; no entry defined  
 Tx: 01 11 09 02 07 08 04 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 04 00 FF FF FF FF 04 ; CT entry list 128..159; no entry defined  
 Tx: 01 11 09 02 07 08 05 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 05 00 FF FF FF FF 04 ; CT entry list 160..191; no entry defined  
 Tx: 01 11 09 02 07 08 06 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 06 00 FF FF FF FF 04 ; CT entry list 192..223; no entry defined  
 Tx: 01 11 09 02 07 08 07 00 00 00 00 00 04  
 Rx: 01 11 0A 02 87 00 00 07 00 FF FF FF FF 04 ; CT entry list 224..255; no entry defined

**12.1 Read Command Table Entry From Servo Example**

Tx: 01 11 05 02 05 08 02 00 04  
Rx: 01 11 0A 02 85 00 00 02 00 **40** 00 00 00 04

Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 **04** 02 00 01 A7 FF FF 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 01 40 42 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 0F 00 20 A1 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 07 00 40 0D 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 03 00 40 0D 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 03 00 00 00 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 00 00 00 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 00 00 00 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 00 00 00 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 00 55 6E 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 6E 61 6D 65 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 64 00 00 00 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 00 00 00 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 00 00 FF FF 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 04 02 00 FF FF FF FF 04  
Tx: 01 11 05 02 06 08 02 00 04  
Rx: 01 11 0A 02 86 00 **00** 02 00 FF FF FF FF 04

## 12.2 Write Command Table Entry To Servo Example

Setup Write Command Table entry 2 data size 40hbytes:

Tx: 01 11 09 02 03 08 02 00 40 00 00 00 04

Rx: 01 11 0A 02 83 00 00 02 00 00 00 00 04

Write Command Table entry 2 data :

Tx: 01 11 09 02 04 08 02 00 01 A7 FF FF 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 01 40 42 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 0F 00 20 A1 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 07 00 40 0D 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 03 00 40 0D 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 03 00 00 00 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 00 00 00 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 00 00 00 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 00 00 00 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 00 55 6E 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 6E 61 6D 65 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 64 00 00 00 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 00 00 00 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 00 00 FF FF 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 FF FF FF FF 04

Rx: 01 11 0A 02 84 00 04 02 00 00 00 00 04

Tx: 01 11 09 02 04 08 02 00 FF FF FF FF 04

Rx: 01 11 0A 02 84 00 00 02 00 00 00 00 04

## 13 Program Handling Message Group

With the program handling message group, the whole servo controller or/and SW instances of it can be accessed.

| Message Main ID | Message Sub ID | Description  |
|-----------------|----------------|--|
| 0x06h           | 0x01h          | Reset Servo Controller Completely (restart of all SW instances) with response after reset completion |
| 0x06h           | 0x02h          | Reset Servo Controller with immediate response   |
| 0x06h           | 0x03h          | Stop MC- and Application SW  |
| 0x06h           | 0x04h          | Start MC- and Application SW with response after start completion                                    |
| 0x06h           | 0x05h          | Start MC- and Application SW with immediate response   |

### 13.1 Reset Servo Controller with Response after completion

#### Request: Reset Servo Controller

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start   |
| 1           | 0x11h | MACID   |
| 2           | 0x03h | Data length   |
| 3           | 0x02h | Fix ID start data   |
| 4           | 0x01h | Sub ID: Reset Servo Controller with Response after completion |
| 5           | 0x06h | Main ID: Program Handling Message Group                       |
| 6           | 0x04h | Fix ID telegram end   |

#### Response: Reset Servo Controller

| Byte Offset | Value | Description                       |
|-------------|-------|-----------------------------------|
| 0           | 0x01h | Fix ID telegram start             |
| 1           | 0x11h | MACID                             |
| 2           | 0x04h | Data length                       |
| 3           | 0x02h | Fix ID start data                 |
| 4           | 0x60h | Sub ID: Program Handling Response |
| 5           | 0x00h | Main ID: Response Message         |
| 6           | 0x00h | Communication State ok            |
| 7           | 0x04h | Fix ID telegram end               |

#### Example:

Tx: 01 11 03 02 01 06 04

Rx: 01 11 04 02 60 00 00 04

The response is given after the reset is completed (ca. 3s)

### 13.2 Reset Servo Controller with immediate Response

#### Request: Reset Servo Controller with immediate Response

| Byte Offset | Value | Description  |
|-------------|-------|--|
| 0           | 0x01h | Fix ID telegram start                                  |
| 1           | 0x11h | MACID  |
| 2           | 0x03h | Data length  |
| 3           | 0x02h | Fix ID start data                                      |
| 4           | 0x01h | Sub ID: Reset Servo Controller with immediate Response |
| 5           | 0x06h | Main ID: Program Handling Message Group                |
| 6           | 0x04h | Fix ID telegram end                                    |

#### Response: Reset Servo Controller with immediate Response

The servo controller answers with the configured default response.

#### Example:

Tx: 01 11 03 02 02 06 04

Rx: 01 11 0C 02 00 00 00 F6 40 00 00 8A 00 00 00 04

The default response is given immediate, to detect reboot completion poll servo controller until it answers.

### 13.3 Stop MC- and Application SW

#### Request: Stop MC- and Application SW

| Byte Offset | Value | Description                             |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start                   |
| 1           | 0x11h | MACID                                   |
| 2           | 0x03h | Data length                             |
| 3           | 0x02h | Fix ID start data                       |
| 4           | 0x03h | Sub ID: Stop MC- and Application SW     |
| 5           | 0x06h | Main ID: Program Handling Message Group |
| 6           | 0x04h | Fix ID telegram end                     |

#### Response: Reset Servo Controller with immediate Response

The servo controller answers with the configured default response.

#### Example:

Tx: 01 11 03 02 03 06 04

Rx: 01 11 0C 02 00 00 00 00 00 00 00 D9 00 00 00 04

### 13.4 Start MC- and Application SW with Response after completion

#### Request: Start MC- and Application SW with Response after completion

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start   |
| 1           | 0x11h | MACID   |
| 2           | 0x03h | Data length   |
| 3           | 0x02h | Fix ID start data   |
| 4           | 0x01h | Sub ID: Reset Servo Controller with Response after completion |
| 5           | 0x06h | Main ID: Program Handling Message Group                       |
| 6           | 0x04h | Fix ID telegram end   |

#### Response: Start MC- and Application SW with Response after completion

| Byte Offset | Value | Description                       |
|-------------|-------|-----------------------------------|
| 0           | 0x01h | Fix ID telegram start             |
| 1           | 0x11h | MACID                             |
| 2           | 0x04h | Data length                       |
| 3           | 0x02h | Fix ID start data                 |
| 4           | 0x60h | Sub ID: Program Handling Response |
| 5           | 0x00h | Main ID: Response Message         |
| 6           | 0x00h | Communication State ok            |
| 7           | 0x04h | Fix ID telegram end               |

**Example:**

Tx: 01 11 03 02 04 06 04

Rx: 01 11 04 02 60 00 00 04

The response is given after the start is completed (ca. 3s)

### 13.5 Start MC- and Application SW with immediate Response

#### Request: Start MC- and Application SW with immediate Response

| Byte Offset | Value | Description  |
|-------------|-------|--|
| 0           | 0x01h | Fix ID telegram start                                  |
| 1           | 0x11h | MACID  |
| 2           | 0x03h | Data length  |
| 3           | 0x02h | Fix ID start data                                      |
| 4           | 0x01h | Sub ID: Reset Servo Controller with immediate Response |
| 5           | 0x06h | Main ID: Program Handling Message Group                |
| 6           | 0x04h | Fix ID telegram end                                    |

#### Response: Start MC- and Application SW with immediate Response

The servo controller answers with the configured default response.

#### Example:

Tx: 01 11 03 02 05 06 04

Rx: 01 11 0C 02 00 00 00 F6 40 00 00 8A 00 00 00 04

The default response is given immediate, to detect restart completion poll servo controller until it answers.

## 14 Read Error Info Message Group

With the Read Error Info message group, error strings and the stored error log of the controller could be read out.

| Message Main ID | Message Sub ID | Description  |
|-----------------|----------------|--|
| 0x07h           | 0x00h          | Get error short text of actual error                     |
| 0x07h           | 0x01h          | Get error short text of defined error code               |
| 0x07h           | 0x02h          | Get error counters of error log and total occurred error |
| 0x07h           | 0x03h          | Get error log entry ( error code, short text and time)   |

### 14.1 Get error short text of actual error

With the Get error short text of actual error request the slave answers with string with 32 characters, which contains the short text of the actual error code (unused characters are filled with 0x00h).

#### Request: Get error short text of actual error

| Byte Offset | Value | Description                                  |
|-------------|-------|--|
| 0           | 0x01h | Fix ID telegram start                        |
| 1           | 0x11h | MACID  |
| 2           | 0x03h | Data length                                  |
| 3           | 0x02h | Fix ID start data                            |
| 4           | 0x00h | Sub ID: Get error short text of actual error |
| 5           | 0x07h | Main ID: Read Error Info Message Group       |
| 6           | 0x04h | Fix ID telegram end                          |

#### Response: Get error short text of actual error

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start                                 |
| 1           | 0x11h | MACID   |
| 2           | 0x24h | Data length   |
| 3           | 0x02h | Fix ID start data                                     |
| 4           | 0x70h | Sub ID: Response Get error short text of actual error |
| 5           | 0x00h | Main ID: Response Message                             |
| 6           | 0x00h | Communication State ok                                |
| 7           | 0x4Eh | First character 'N'                                   |
| .           | ..    | Chracters 2..32                                       |
| 39          | 0x04h | Fix ID telegram end                                   |

#### Example:

Tx: 01 11 03 02 00 07 04

Rx: 01 11 24 02 70 00 00 4E 6F 20 45 72 72 6F 72 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 04

The slave responds with the string ‚No Error‘.



## 14.2 Get error short text of defined error code

With the Get error short text of defined error code request the slave answers with string with 32 characters, which contains the short text of the actual error code (unused characters are filled with 0x00h).

### Request: Get error short text of defined error code

| Byte Offset | Value | Description  |
|-------------|-------|--|
| 0           | 0x01h | Fix ID telegram start                              |
| 1           | 0x11h | MACID  |
| 2           | 0x05h | Data length  |
| 3           | 0x02h | Fix ID start data                                  |
| 4           | 0x01h | Sub ID: Get error short text of defined error code |
| 5           | 0x07h | Main ID: Read Error Info Message Group             |
| 6           | 0x01h | Error code low byte                                |
| 7           | 0x00h | Error code High byte (have to be 0x00h)            |
| 8           | 0x04h | Fix ID telegram end                                |

### Response: Get error short text of defined error code

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start                                 |
| 1           | 0x11h | MACID   |
| 2           | 0x26h | Data length   |
| 3           | 0x02h | Fix ID start data                                     |
| 4           | 0x71h | Sub ID: Response Get error short text of actual error |
| 5           | 0x00h | Main ID: Response Message                             |
| 6           | 0x00h | Communication State ok                                |
| 7           | 0x01h | Error code low byte                                   |
| 8           | 0x00h | Error code high byte                                  |
| 9           | 0x4Eh | First character 'N'                                   |
| .           | ..    | Chracters 2..32                                       |
| 41          | 0x04h | Fix ID telegram end                                   |

### Example:

Read Error text of Error Code 01h:

Tx: 01 11 05 02 01 07 01 00 04

Rx: 01 11 26 02 71 00 00 01 00 45 72 72 3A 20 58 34 20 4C 6F 67 69 63 20 53 75 70 70 6C 79 20 54 6F 6F 20 4C 6F 77 00 00 00 04

The slave responds with the string ,Err: X4 Logic Supply Too Low'.

### 14.3 Get error counters of error log and total occurred errors

With the Get error short text of defined error code request the slave answers with string with 32 characters, which contains the short text of the actual error code (unused characters are filled with 0x00h).

#### Request: Get error counters of error log and total occurred errors

| Byte Offset | Value | Description                            |
|-------------|-------|--|
| 0           | 0x01h | Fix ID telegram start                  |
| 1           | 0x11h | MACID                                  |
| 2           | 0x03h | Data length                            |
| 3           | 0x02h | Fix ID start data                      |
| 4           | 0x02h | Sub ID: Get error counters             |
| 5           | 0x07h | Main ID: Read Error Info Message Group |
| 6           | 0x04h | Fix ID telegram end                    |

#### Response: Get error short text of defined error code

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start                                 |
| 1           | 0x11h | MACID   |
| 2           | 0x08h | Data length   |
| 3           | 0x02h | Fix ID start data                                     |
| 4           | 0x72h | Sub ID: Response Get error short text of actual error |
| 5           | 0x00h | Main ID: Response Message                             |
| 6           | 0x00h | Communication State ok                                |
| 7           | 0x15h | Low byte Number of error log entries                  |
| 8           | 0x00h | High byte Number of error log entries                 |
| 9           | 0x4Eh | Low byte Number of occurred errors                    |
| 10          | 0x00h | High byte Number of occurred errors                   |
| 41          | 0x04h | Fix ID telegram end                                   |

#### Example:

Tx: 01 11 03 02 02 07 04

Rx: 01 11 08 02 72 00 00 15 00 90 00 04

The slave responds 21 ( 0x15h) Logged errors (=buffer size) and 144 (0x90h) occurred errors.

### 14.4 Get error log entry

With the Get error short text of defined error code request the slave answers with string with 32 characters, which contains the short text of the actual error code (unused characters are filled with 0x00h).

#### Request: Get error counters of error log and total occurred errors

| Byte Offset | Value | Description                                  |
|-------------|-------|--|
| 0           | 0x01h | Fix ID telegram start                        |
| 1           | 0x11h | MACID  |
| 2           | 0x05h | Data length                                  |
| 3           | 0x02h | Fix ID start data                            |
| 4           | 0x03h | Sub ID: Get error log entry                  |
| 5           | 0x07h | Main ID: Read Error Info Message Group       |
| 6           | 0x00h | Low byte error log entry number (0 = newest) |
| 7           | 0x00h | How byte error log entry number              |
| 8           | 0x04h | Fix ID telegram end                          |

#### Response: Get error short text of defined error code

| Byte Offset | Value | Description   |
|-------------|-------|---|
| 0           | 0x01h | Fix ID telegram start                               |
| 1           | 0x11h | MACID   |
| 2           | 0x0Eh | Data length   |
| 3           | 0x02h | Fix ID start data                                   |
| 4           | 0x73h | Sub ID: Response Get error log entry                |
| 5           | 0x00h | Main ID: Response Message                           |
| 6           | 0x00h | Communication State ok                              |
| 7           | 0x0Ch | Low byte error code                                 |
| 8           | 0x00h | High byte error code                                |
| 9           | 0x3Eh | Low byte low word milli second counter (run time)   |
| 10          | 0x11h | High byte low word milli second counter (run time)  |
| 11          | 0x0Eh | Low byte high word milli second counter (run time)  |
| 12          | 0x00h | High byte high word milli second counter (run time) |
| 13          | 0x6Fh | Low byte low word hour counter (run time)           |
| 14          | 0x02h | High byte low word hour counter (run time)          |
| 15          | 0x00h | Low byte high word hour counter (run time)          |
| 16          | 0x00h | High byte high word hour counter (run time)         |
| 17          | 0x04h | Fix ID telegram end                                 |

#### Example:

Tx: 01 11 05 02 03 07 00 00 04

Rx: 01 11 0E 02 73 00 00 0C 00 3E 11 0E 00 6F 02 00 00 04

The slave responds:

Error code: 0x000Ch, ‚Err. Pos Lag Standing Too Big’

Milli second counter: 0x000E113Eh= 921218ms=15min 21s 918ms

Hour counter: 0x0000026Fh= 623h

## 15 LinRS Parameters

The E1100 Servo Controllers with loaded LinRS protocol SW have an additional parameter tree branch, which can be configured with the distributed LinMot-Talk1100 software. With these parameters, the LinRS behaviour can be configured. The software LinMot-Talk1100 can be downloaded from <http://www.linmot.com> under the section download, software & manuals.

**Dis-/Enable** With the Dis-/Enable parameter the LinMot servo controller can be run without the LinRS going online.

| LinRS\ Dis-/Enable |  |
|--------------------|--|
| Disable            | Servo controller runs without LinRS.   |
| Enable             | Servo controller runs with a LinRS connection, the RS configuration is not port is no longer active! (default) |

**IMPORTANT:** To activate the LinRS Interface, the Dip-Switch S3.4 “Interface” at the bottom of the drive has to be set to “ON” with power up.

**RS Config** In this section the RS UART behaviour can be configured.

**RS Select** In this section the RS line type of RS can be configured.

**RS Source Select** Over the RS select parameter the bus topology is defined.

| LinRS\ RS Config\ RS Select\ RS Source Select |   |
|---|---|
| By S3.1                                       | Look at S3.1 for RS232 RS 485 selection (default) |
| Parameter                                     | Take value from parameter RS Parameter Def.       |

**RS Parameter Def** Over the RS select parameter the bus topology is defined.

| LinRS\ RS Config\ RS Select\ RS Parameter Def |   |
|---|---|
| RS 485  | RS 485 two wire bus topology (default)      |
| RS 422  | RS 422 four wire bus topology               |
| RS 232  | RS 232 two wire point to point bus topology |

**Baud Rate** In this section the parameters for the baud rate selection are located.

**Baud Rate Source Select** Defines if the baud rate is defined over Hex Switch S1 or parameter.

| LinRS\ RS Config\ Baud Rate\ Baud Rate Source Select |   |
|--|---|
| By Hex Switch S1                                     | Look at S1 for Baud Rate Selection (default)              |
| By Parameter   | Take value from parameter Baud Rate Parameter Definition. |

### Baud Rate Parameter Definition

The baud rate definition if defined with parameter.

| LinRS\ RS Config\ Baud Rate\ Baud Rate Parameter Def |                                      |
|--|--------------------------------------|
| 4800 Bit/s   | RS baud rate = 4800 Bit/s            |
| 9600 Bit/s   | RS baud rate = 9600 Bit/s            |
| 19200 Bit/s  | RS baud rate = 19200 Bit/s           |
| 38400 Bit/s  | RS baud rate = 38400 Bit/s           |
| 57600 Bit/s  | RS baud rate = 57600 Bit/s (default) |
| 115200 Bit/s   | RS baud rate = 115200 Bit/s          |

### Stop Bit

Defines the stop bit length.

| LinRS\ RS Config\ Stop Bit |                       |
|----------------------------|-----------------------|
| 1                          | One stop bit          |
| 2                          | Two bit time stop bit |

### Parity

Defines the parity bit behaviour.

| LinRS\ RS Config\ Parity |                 |
|--------------------------|-----------------|
| None                     | No parity bit   |
| Even                     | Even parity bit |
| Odd                      | Odd parity bit  |

### Protocol Config

In this section the protocol can be configured.

### MACID

In this section the MAC ID (controller number) can be configured.

### ID Source Select

Defines if the MACID is defined over Hex Switches or parameter.

| LinRS\ Protocol Config\ MACID\ MACID Source Select |  |
|--|--|
| By Hex Switch<br>S2                                | Look at S2 for ID definition (default)   |
| By Hex<br>Switches S1 and<br>S2                    | Look at S1 and S2 for ID definition.     |
| By Parameter                                       | Take the value of MACID Parameter Value. |

### MACID Parameter Value

The ID parameter defines the source of the MACID.

| LinRS\ Protocol Config\ MACID\ MACID Parameter Value |  |
|--|--|
| MACID<br>Parameter<br>Value                          | The ID, when "Parameter" is selected as ID Source<br>(0x11h default) |

### Checksum

The checksum parameter defines the checksum generation.

| LinRS\ Protocol Config\ Checksum |   |
|----------------------------------|---|
| None                             | No checksum is expected or generated (default)              |
| Add                              | A simple byte wise addition modulo $2^{16}$ (fast and easy) |
| CRC CCITT                        | CRC checksum with CCITT polynomial 16 bit                   |

### Receive Time Out

Specifies the byte to byte time out during receiving, if the timeout occurs the receive state machine is reset. This behaviour enables a

correct receive of the following telegram even if the actual telegram is corrupted.

| LinRS\ Protocol Config\ Receive Time Out |   |
|--|---|
| Enable                                   | <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul> |
| Time Out                                 | Byte to byte time out value   |

## MC Response Configuration

The response configuration determines the data that is responded from the LinMot Servo controller to the PLC. The orders of the data correspond to selection order in the response.

| LinRS\ Protocol Config\ MC Response Configuration |   |
|---|---|
| Communication State                               | LinRS Status byte of communication (Default Selection On) |
| Status Word                                       | Status Word (Default Selection On)                        |
| State Var   | State Variable (Default Selection Off)                    |
| Error Code  | Error Code (Default Selection Off)                        |
| Warn Word   | Warn Word (Default Selection Off)                         |
| MC Cmd Intf Header Echo                           | MC command interface echo (Default Selection Off)         |
| Monitoring Channel 1                              | Monitoring Channel 1 Selection (Default On)               |
| Channel 1 UPID                                    | Monitoring Channel 1 UPID                                 |
| Monitoring Channel 2                              | Monitoring Channel 2 Selection (Default Off)              |
| Channel 2 UPID                                    | Monitoring Channel 2 UPID                                 |
| MC Response                                       | 4 byte Place holder for MC Response (Default Off)         |

## Error

In this section the Error behaviour can be defined.

### Error Detection Mask

With the error detection mask a single error can be disabled. Also a LinRS error causes the MC-SW go to the error state.

| LinRS\ Error\ Error Detection Mask |                        |
|------------------------------------|------------------------|
| Checksum Error                     | (Default Selection On) |
| End Of Telegram Missing            | (Default Selection On) |
| Wrong Msg Main ID                  | (Default Selection On) |
| Wrong Msg Sub ID                   | (Default Selection On) |
| UPID Not Existing                  | (Default Selection On) |

**Respond On Msg With Error**

Typically the LinMot servo controller doesn't answer to wrong telegrams, with this mask the response for certain errors can be enabled. With turned on Communication state in the MC default response the error will be responded to the master.

**LinRS\ Error\ Respond On Msg With Error**

|                         |                        |
|-------------------------|------------------------|
| Checksum Error          | (Default Selection On) |
| End Of Telegram Missing | (Default Selection On) |

## 16 Error

Within the LinRS Intf SW several errors are supported, most of them can be disabled, because they are not fatal. For the motion control specific errors refer to document [1].

### 16.1 LinRS Error Codes

In the table below the LinRS specific error codes are listed.

| Value | Description  |
|-------|--|
| C1h   | Checksum error                                     |
| C2h   | Message format error End of Telegram (04h) missing |
| C3h   | Undefined Message Main ID                          |
| C4h   | Undefined Message Sub ID                           |
| C5h   | Wrong Baud Rate Defined With S1                    |
| C8h   | Parameter Unknown UPID                             |
| C9h   | Parameter Wrong Type                               |
| .     | ..   |